
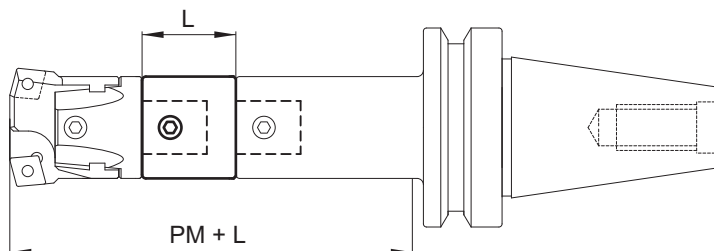


# ACCESORIES


## EXTENSION PIECES

Dimension				Product Number	Kg.	Coupling Screw
øD	øD1	øD2	L			
22	12	12	20	<b>P 22 20</b>	0.095	22-68
22	12	12	30	<b>P 22 30</b>	0.140	22-68
27	15	15	30	<b>P 27 30</b>	0.180	27-610
27	15	15	45	<b>P 27 45</b>	0.250	27-610
32	20	20	35	<b>P 32 35</b>	0.260	32-810
32	20	20	52	<b>P 32 52</b>	0.375	32-810
42	24	24	40	<b>P 42 40</b>	0.480	42-1014
42	24	24	60	<b>P 42 60</b>	0.700	42-1014
54	28	28	50	<b>P 54 50</b>	0.950	54-1220
54	28	28	75	<b>P 54 75</b>	1.400	54-1220
68	36	36	60	<b>P 68 60</b>	1.800	68-1624
68	36	36	90	<b>P 68 90</b>	2.600	68-1624
85	50	50	70	<b>P 85 70</b>	3.050	85-1630
85	50	50	105	<b>P 85 105</b>	4.450	85-1630
100	60	60	80	<b>P 100 80</b>	4.600	100-2035
100	60	60	120	<b>P 100 120</b>	7.100	100-2035

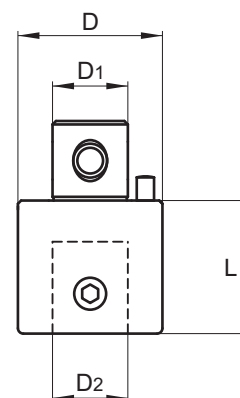

## COOLANT-FEEDING EXTENSIONS (PROVIDES FLOOD COOLANT)

Dimension				Product Number	Kg.	Coupling Screw
øD	øD1	øD2	L			
22	12	12	30	<b>P 22 30 R</b>	0.140	22-68
27	15	15	30	<b>P 27 30 R</b>	0.180	27-610
32	20	20	35	<b>P 32 35 R</b>	0.260	32-810
42	24	24	40	<b>P 42 40 R</b>	0.480	42-1014
54	28	28	50	<b>P 54 50 R</b>	0.950	54-1220
68	36	36	60	<b>P 68 60 R</b>	1.800	68-1624
85	50	50	70	<b>P 85 70 R</b>	3.050	85-1630
100	60	60	80	<b>P 100 80 R</b>	4.600	100-2035

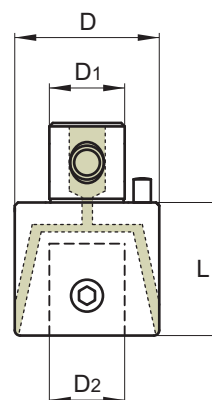

**NOTE:** Couplings to match with coolant-feeding extensions must be ordered by adding "R" at the end of the product number.

Example:  
Standard Execution: BT 340 22 50  
Coolant Execution: BT 340 22 50 R