



Universal Handle

Features :

- Universal type for holding in multi-ways.
- Having large support surfaces for thumb and index finger ease of using and efficiency.
- Remaining the advantages of flag design, driving the screw easily.

Fig	Parts No.	Suit For Torque	Color	S	L	H	d	N.W.
1	0-TPK-H01	0.6~5.5 Nm	Red	6.35	37.5	70.7	5	25g

Slim-Fit Handle

Features :

- Slim fit for comfortable holding, for accurate and efficient while fastening and loosening small sizes screws

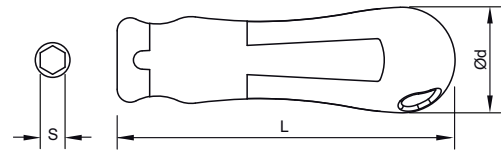


Fig	Parts No.	Suit For Torque	Color	S	L	Ød	N.W.
2	0-TPK-H02	0.6~2.0 Nm	Red	6.35	104	32.5	45g

T Flying Handle

Features :

- It is light, even it is designed for higher torque.
- The striking soft zone that allows particularly comfortable, best handle for using at higher torque.


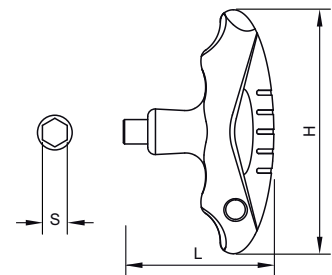


Fig	Parts No.	Suit For Torque	Color	S	L	H	N.W.
3	0-TPK-H03	3.0~5.5 Nm	Red	6.35	65	100	59g

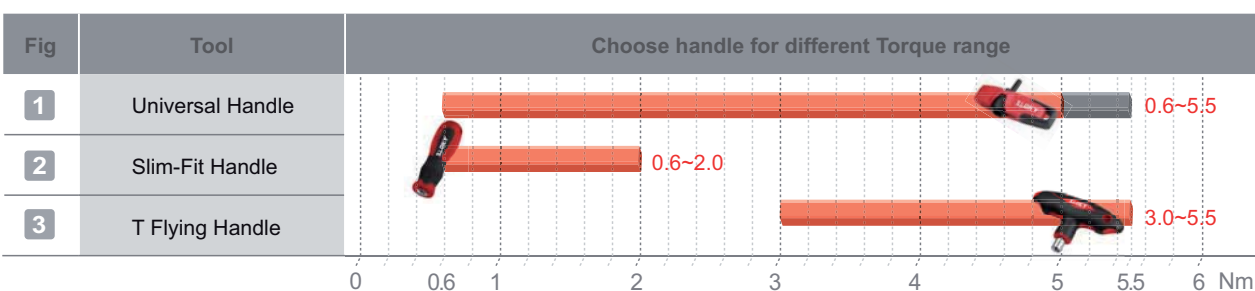

Adapter

Principle

"No- over tighten" adapter is created from the non-return ratchet torque socket. It comprised a shaft rod and a shaft cylinder.

A core shaft of shaft rod is sleeved with a mobile ratchet capable of axially moving; the shaft cylinder has a shaft slot formed for being sleeved with the core shaft.

When the core shaft rotates in the shaft slot and the applied torque exceeds the preset torque value, the core shaft idly rotates in the shaft slot.

It means when the demand torque is reached, continued tightening is no longer to increase the torque on the screw.



✓ 20,000 times product life test

Handle



Features

We offer **3** different types of handle for your options.

The soft zone is comfortable to hold and play very flexible.
Easy to tighten and loosen screws even in higher torque range.

The outstanding design of the SLOKY handle that fits perfectly into the hand and prevents the hand injuries such as blisters and calluses.



The ergonomic design of the handle

Bits

Color Identity

No mistake!

The color identification is visible on both adapters and bits.

Select suitable torque size by color management system indicated on torque adapters and bits.

It is to enhance the convenience of using and delivery proper tightening torque.



TORX®





TORX PLUS®



Tools created from ideas

User Guide

The tips of using different handle

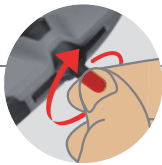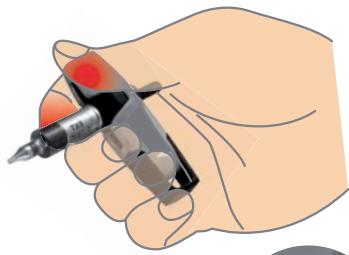

Large support areas for thumb and index finger on the ergonomically shaped handles.

The transmission of high torques is thus quite simple. Cylindrical handle shaft for quick turning of screws.



The Slim Fit handle has been designed to fit snugly in your hand, making blisters and calluses a thing of the past, even after intensive use.

The handle hard zones allow the hand to easily glide during hand repositioning. The soft zones ensure full force transfer through the grip.




The T Flying handle is needed whenever particularly high torque for loosening or tightening jobs needs to be applied.

The power is transferred positively, there is no frictional loss between the hand and the handle.

Simple operation



Exchange bits system with colour coding

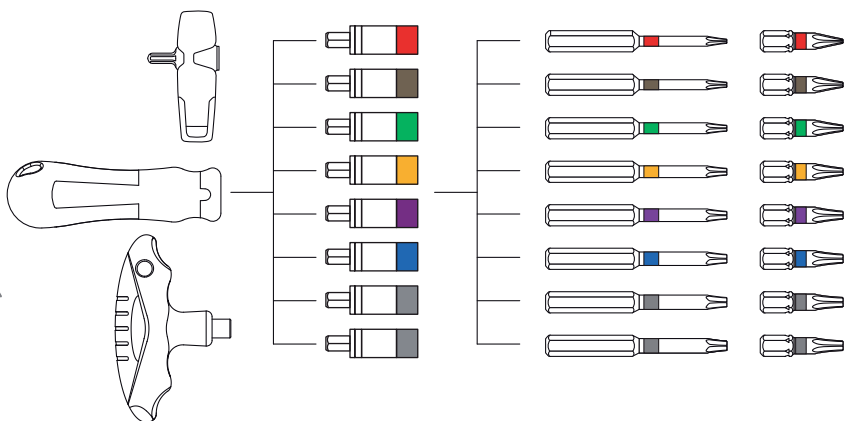

All adapters with magnetic, the bits can be inserted and automatically locked into the adapters.

Why the torque may get low after use a certain time?

The torque adapter is functional by the radial direction friction; it is different from the marketed product nowadays. When an object slips or is going slip with another object, on the two contact faces will create a relative action. This relative action is called the static friction, it creates the abrasion after use a certain time. The preset torque of adapter may get low due to this abrasion.

How to judge?

- +/-10% allowance for torque adapter is acceptable.
- Please check it on Torque analyzer or measurement.

